



FIND SPARE SUPPLY CCTS

Conventionally you refer to the drawings so this is not a large task IF your drawings are accurate and no one else is planning on using the spares you find.


This is a simpler task in DAD and less prone to “claim jumping” by others. You can find spare circuit breakers like this:

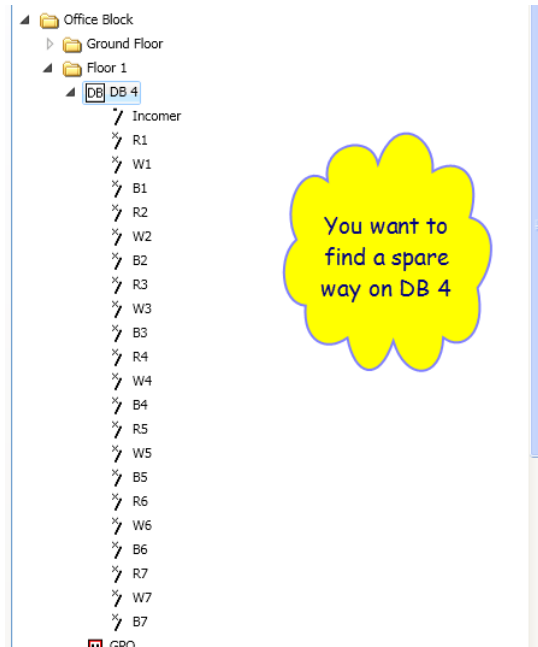

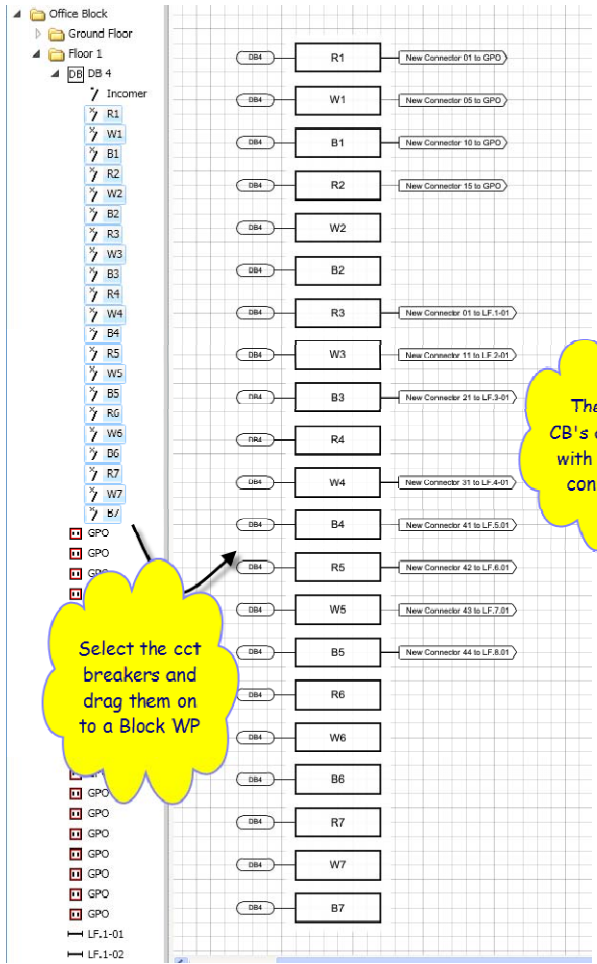

Select the cct breakers and drag them on to a Block W/P

The spare CB's are those with no cable connected.

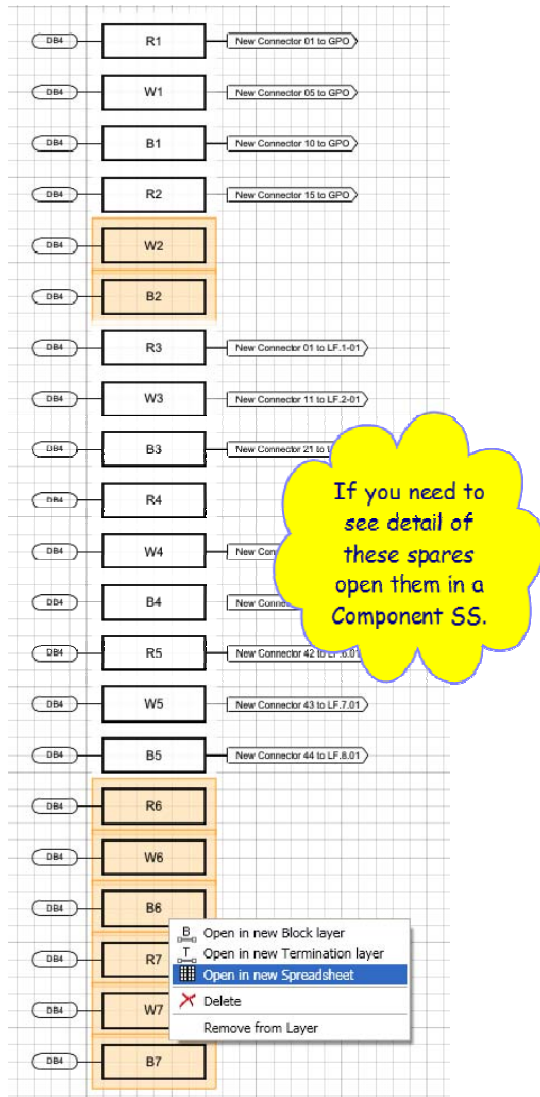

Components Spreadsheet

Name	Duty	Type	Note
B2	Spare	16A	
B6	Spare	16A	
B7		16A	
R-1	Spare	16A	
R6	Spare	16A	
R7	Spare	16A	
W2	Spare	16A	
W6		16A	
W7		16A	

9 items

If you are not going to connect to the CB now you might add a Note reserving it.

If instead of looking at the load connections you had searched for Spare in Duty you would have missed B7, W6 and W7.